



# SNES CONTROLLER TO WII-GAMECUBE CABLE

For adapter V.1 and up

## 1. button mappings

To the console, the adapter appears to be a standard Gamecube controller, making it possible to use SNES compatible controllers on a Wii or Gamecube. Ideal for Wii virtual console SNES and NES games.

To enable a specific mapping, press down the corresponding Activation combination when powering up the adapter.

SNES MODE	
SNES	Gamecube
Start	Start
Select	Z
D-Pad	D-Pad
Y	Y
X	X
B	B
A	A
L	L
R	R
L+R+Select+Left	C-Stick Right
Activation	
Default	

NES MODE 1	
SNES	Gamecube
Start	Start
Select	Z
D-Pad	D-Pad
Y	B
X	N/A
B	A
A	N/A
L	N/A
R	N/A
Y+B+Slect+Left	C-Stick Right
Y+B+Select+Up	L+R
Activation	
Hold: START	

NES MODE 2	
SNES	Gamecube
Start	Start
Select	Z
D-Pad	D-Pad
Y	A
X	N/A
B	B
A	N/A
L	N/A
R	N/A
Y+B+Select+Left	C-Stick Right
Y+B+Select+Up	L+R
Activation	
Hold: START+Y+B	

For adapter V1.3+ only!

## 2. features

- Supports official and 3rd party SNES controllers.
- Compatible with American, European and Japanese controllers.
- Works on Gamecube, Wii and most GC-to-USB adapters.
- Special button combinations to access emulator menus.

## 3. important

This adapter only works on Wii with Gamecube ports!

